4-in 1-out HDMI Switcher

Operation Manual



Introduction


CHDMI-41 is a high performance HDMI switcher with remote control. It allows your various HDMI sources to share one HDTV display.

Simply pressing one button to select your desired HDMI source for display on the HDTV.

Features

- * HDMI 1.2, HDCP 1.1 and DVI 1.0 compliant.
- * Signal Enhancement feature allows you to improve signal quality after long distance transmission.
- * LED indicators.
- * Ideal for home theater integration.
- * Supports high resolution input: PC: VGA, SVGA, XGA, SXGA, and UXGA (1600 x 1200)& HDTV: 480i, 576i, 480p, 576p, 720p, 1080i, and 1080p
- * Remote control.
- * Easy to install and simple to operate.


Operation Controls and Functions Front Panel



- 1. Remote control sensor.
- Input select/Indicators: Press the "INPUT" button repeatedly to switch to your desired input source and the LED will illuminate to indicate which input source is being selected.
- **3. Signal Enhancement/Indicator:** Press the "Signal Enhance" button to turn on this feature to improve signal quality after long distance transmission. Press again to turn off. The LED will illuminate when the signal is enhanced.
- **4. Power LED Indicator:** The LED will illuminate when the power is connected.

Operation Controls and Functions

Rear Panel

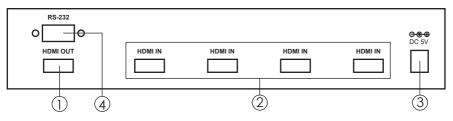

1. **HDMI output:** Connect the HDMI output to the HDMI input of your display using HDMI cable.

2. HDMI inputs: Connect your various HDMI sources to each of the HDMI input of the unit using HDMI cables.

3. Power: Plug the supplied 5VDC power supply into the unit.

4. RS232: 9-pin D-sub female connector for connecting to your other control

console for remote control.

Remote Control


1. Power:

Press the button to turn on/off the unit.

2. Direct input selector:

Press numerical number button to select your desired input source.

3. Void buttons (No function). If the button number is greater than the total input number of the unit then the button is of no function.

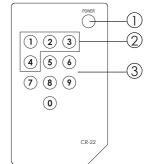

Specifications

* Frequency bandwidth: 1.65Gbps(single link)

* Inputs: 4 x HDMI female ports (Type A connector)

* Output: 1 x HDMI female port (single link)

* 5VDC universal power supply

* Weight: 0.85kgs

* Dimension: 240(W) x104(L) x 44(H)mm

CHDMI-41 RS-232 Remote Control Protocol

* The connection between CHDMI-41 and remote controller with **RS-232 modem cable**. Pins definition of modem cable

CHDMI-41			Remote Controller	
PIN	Definition		PIN	Definition
1	NC		1	NC
2	T xD		2	R xD
3	RxD		3	TxD
4	NC		4	NC
5	GND	←	5	GND
6	NC		6	NC
7	NC		7	NC
8	NC		8	NC
9	NC		9	NC

* RS-232 transmission format:

Baud Rate: 9600 bps Data Bit: 8 Bits

Parity: None Stop Bit: 1 bit

* Command:

- * A command is combined with a word plus a digit
- * This combination commnad code has to be separated by ASCII character SPACE
- * The command will be executed after ASCII character "CR" input
- * After ASCII character "CR" is entered, The unit will reply "OK" if the command is legal
- * If the command is illegal, The unit will reply "NG"

Command Code	Comment	
"PORT"+ SPACE+"1"+CR	PORT 1 ON	
"PORT"+ SPACE+"2"+CR	PORT 2 ON	
"PORT"+ SPACE+"3"+CR	PORT 3 ON	
"PORT"+ SPACE+"4"+CR	PORT 4 ON	
"PORT"+ SPACE+"5"+CR	PORT 5 ON	
"PORT"+ SPACE+"6"+CR	PORT 6 ON	
"PORT"+ SPACE+"?"+CR	QUERY PORT STATUS	
"SIGNAL"+SPACE+"1"+CR	ENABLE SIGNAL ENHANCE	
"SIGNAL"+SPACE+"0"+CR	DISABLE SIGNAL ENHANCE	
"SIGNAL"+SPACE+"?"+CR	QUERY SIGNAL STATUS	
"POWER"+ SPACE+"1"+CR	POWER ON	
"POWER"+ SPACE+"0"+CR	POWER OFF	
"POWER"+ SPACE+"?"+CR	QUERY POWER STATUS	

*Example: Command Code Reply

"PORT"+ SPACE+"1"+CR OK+ASCII(A)+ASCII(D)

"PORT"+ SPACE+"?"+CR ASCII(A)+ASCII(D)+"0xPort Num"+ASCII(A)+ASCII(D)+

"OK"+ASCII(A)+ASCII(D)

Connection and Installation

